


# INF-BC4 OPERATION

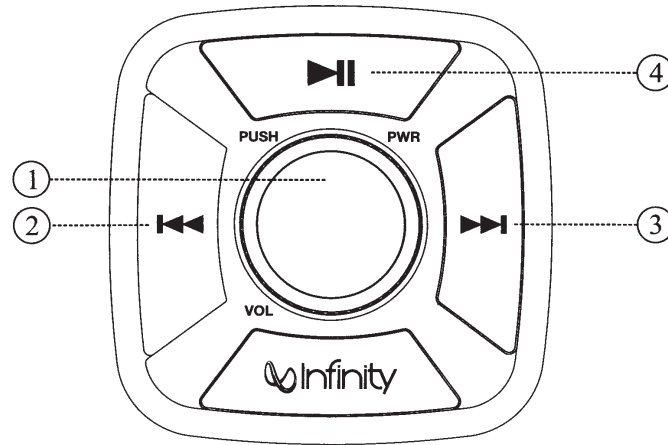

## 1. POWER ON/OFF button, VOL knob

- Press the knob to power the controller on or off.
- Turn right and left to adjust volume level.

(Remark: A beep tone indicates volume has reached maximum or minimum level.)

### To establish Bluetooth connection

- Once the controller has been powered on, it will blink red and blue until a Bluetooth connection has been made.
- Go to your digital media to turn Bluetooth on and then search for the INFBC4 address. Once paired, the controller will turn to a constant blue.

## 2. Track DN button

- Press it to select the previous track.

## 3. Track UP button

- Press it to select the next track.

## 4. Play/Pause button

- Simply press it to pause the playback.
- Simply press it again to resume playback.

### To Disconnect Bluetooth device

- Press and hold the PAUSE button for 3 seconds to disconnect from Bluetooth. The controller will flash red and blue when disconnected.
- After Bluetooth has been disconnected, press PAUSE button to reconnect the last paired device.

### Cables configuration:

1. Red: +12V power supply with 2A fuse.
2. Black: GND.
3. Blue: REM OUT with constant 12V power supply.
4. White/Blue: REM IN for external remote control. With external remote control connected to REM IN, the BT Controller can also be powered on/off by that external remote control.)
5. Black: RCA Output.